



7 ca dU]V]]lm

- Ó^i\ • @^ÁÈÛã^áÚq ç^


DUW_]b[`@gh

- Rear Fireback

bghU`U]cb

WARNING Turn off gas to the appliance and make sure it has fully cooled prior to conducting service.

- 1 Remove the glass frame and logs (see the manual for details).
- 2 Install the firebacks following the directions below.

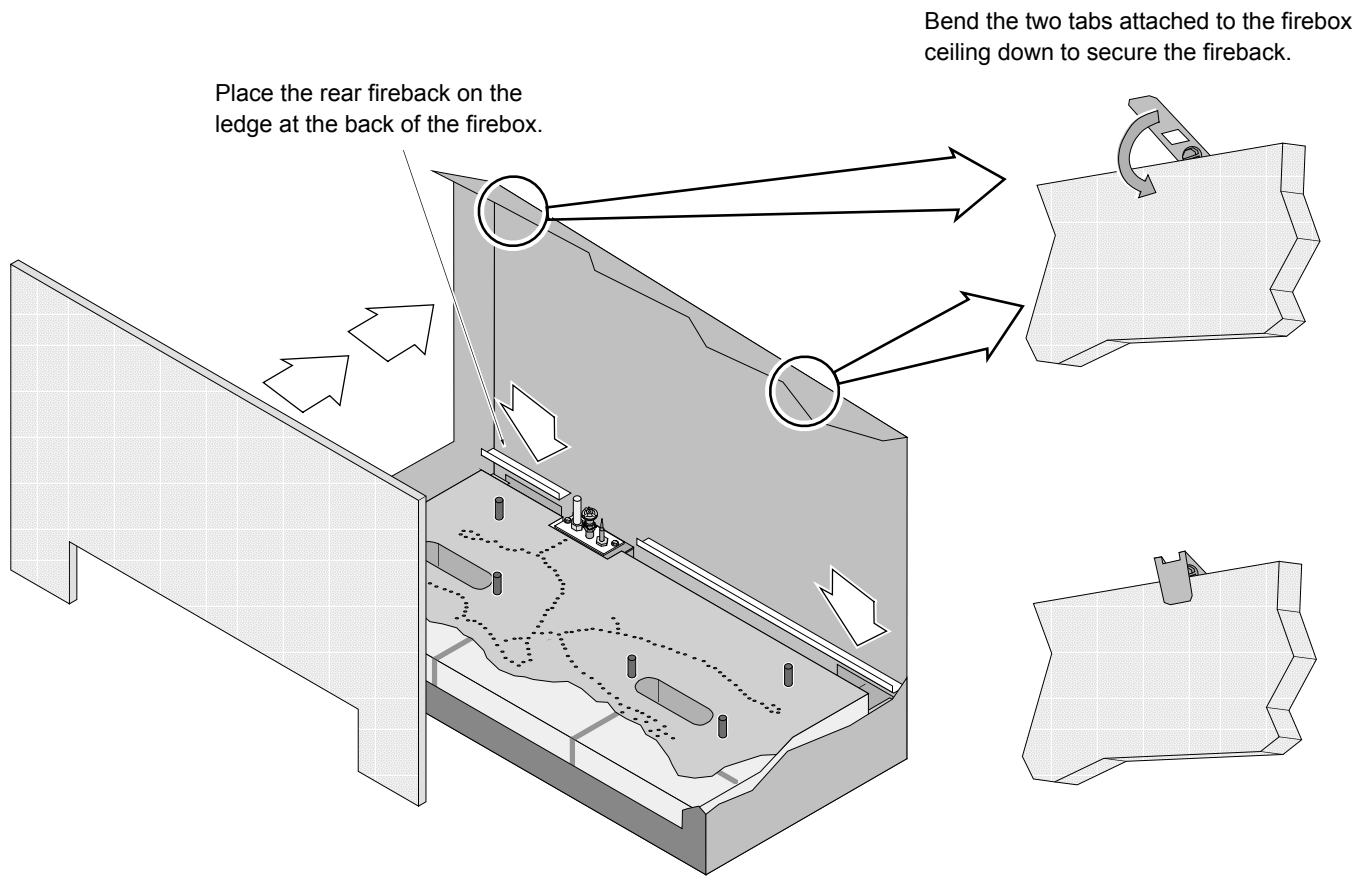

- 3 Restore the stove to the correct configuration.