



TRAVIS INDUSTRIES
HOUSE OF FIRE

430 EmberGlo™ (EG) Insert - Cheat Sheet

The 430 EG has several new features and characteristics that require special attention during installation and set-up. Refer to the owner's manual for full details.

Upper Accent Light



The light shield (shipped with the face) is no longer needed and may be discarded.


EmberGlo Lights

This heater has been updated to include the EmberGlo lights. After detailing the insert, make sure to adjust the built in rheostat to the correct position before installing the face. The remote then controls the EmberGlo lights (they will turn on and off with the system).

Remote Control / Pilot Warnings



Installing batteries in the battery holder or connecting the appliance to power may automatically initiate the CPI pilot mode, resulting in a lit pilot flame. Do not place combustibles in the firebox.

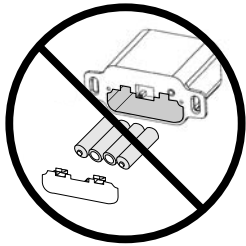

KEEP BATTERIES AND COVER INSTALLED AT ALL TIMES

The remote control system requires the batteries and battery cover to remain in place at all times. Once the batteries or cover are removed, the system may re-start in standing pilot mode. If this occurs when the heater is in Remote Mode, you will not be able to turn the heater off manually from the battery box. If you need to replace dead batteries, make sure to **turn the appliance off** before removing the batteries. **NOTE:** If the batteries go dead, the system will operate normally as long as household power (120v AC) is present.

If using LP (Propane)

A conversion kit is required if using propane with this heater (Single sku# 250-01463) or (4 pk. sku 94400999) – GSR Stepper Motor Kit).

Additional Items

- **Shipping Brackets on Side of Insert May be Removed and Discarded**
These brackets, and screws, are used to protect the insert. See surround panel instructions for details.
- **Glass Tool is Attached to the Insert, Inside the Right Convection Chamber**
This insert uses a glass tool to remove the glass frame. It is shipped inside the right convection chamber, attached with a screw. See the photos below for glass frame removal. See manual for details.



- **Vent Kit "G" (sku 96200339) May Be Used With This Insert**
The co-linear 3" exhaust and intake vent kit works with this insert. See manual for details.
- **Power Cord Exits Behind Surround Panel**
The power cord ships attached to the side of the insert. It may be re-routed to the front (exits between face and surround panel) by disconnecting the strain relief and mox connector.



430 EmberGlo™ (EG) Insert - Cheat Sheet

HAVE YOUR ACCESSORIES ON HAND WHEN INSTALLING THIS INSERT

This insert requires the following accessories:

- Media Kit (logs/stones)
- Firebacks
- Surround Panels
- Face

These accessories are required to ensure correct and safe operation. Do not operate the appliance without the firebacks in place.

ORDER OF INSTALLATION

When setting up the insert, you will need to follow a specific order of installation to optimize installation time. Failure to have all of the accessories available at the time of installation will delay installation and may lead to unnecessary disassembly of components.

1. Run gas line to the fireplace
2. Remove the glass frame.
3. Run vent through fireplace chimney. On larger fireplaces, the vent connector may be left in place. For smaller fireplaces, remove the vent connector. See "Vent Connector Removal and Installation" for details.
4. Place insert into position and attach the gas line and vent.
5. Remove the burner.
NOTE: If using propane (LP), convert the appliance at this time.
6. Install the firebacks.
7. Replace the burner.
8. Install the media (logs, stones - see instructions included with the media).
9. Install the surround panel (see instructions included with surround panel).
10. Replace the glass.
11. Install the face (see instructions included with the face).
12. Follow the instructions under "Finalizing the Installation."